



LOC-SURE™ Metal Drip Clamp




- Steel locking clamps
- Use to secure poly fittings to poly tube and Drip Eze™
- Metal construction won't crack or blow-off
- Easy close with pliers or multi grips
- Ideal for use with drip watering systems
- Available in 13mm and 19mm

ASSEMBLY


1

Slide Loc-Sure clamps over Drip Eze™ or poly tube.

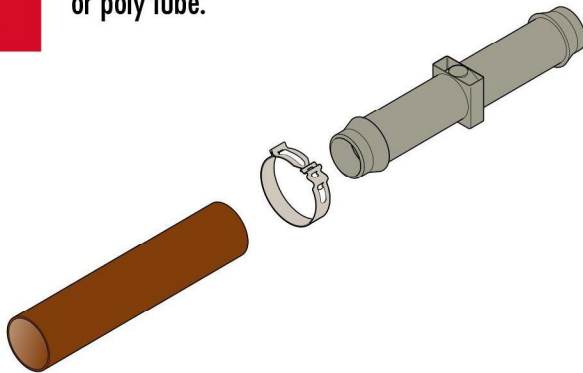


2

Insert poly fitting into tube and position clamp behind barb on fitting.

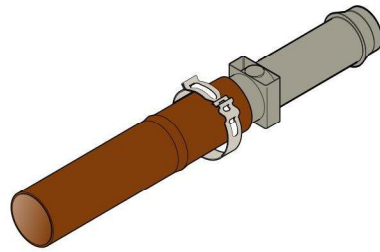


3

Use pliers or multigrips to squeeze ridges on clamp together to secure.

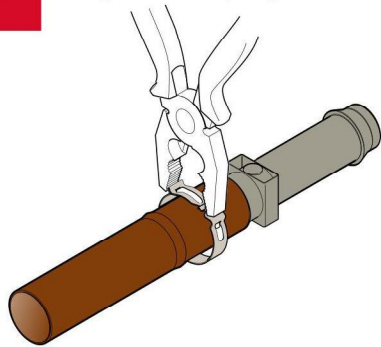

4

The poly fitting and Drip Eze™ tube / poly tube are now secured.

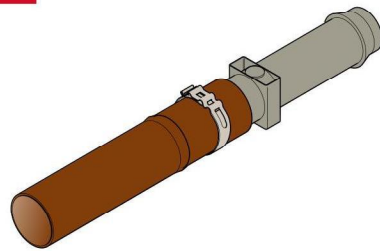

Drip Watering for Life